



Manufactured by  
Graffiti Graphics, Inc.  
P.O. Box 388 Johnston, Iowa 50131

## PRE-INSTALLATION GUIDELINES

Glass surface must be clean. Use soap and water only, no solvents.

Glass surface must be completely dry. Use lint-free cloth or brown industrial paper towels to dry glass.

Temperature of glass must be moderate. In extremely cold weather (below 40F), apply film in late afternoon, as windows will have warmed up. Applying film to glass that is too cold may adversely affect the adhesion of the film.

Film that has been stored in extremely cold conditions can become brittle. To prevent from cracking, allow the film to warm up before installing. In extremely warm weather (above 90F), apply film in early morning, while glass surface is cool. If possible, avoid applying film in hot sun. Applying film to glass that is too hot can cause stretching.

## INSTALLATION INSTRUCTIONS

**Measure window to make sure that you have the correct product size before installing!**

**Tools needed:** Utility knife, Lint free cloth, 4" squeegee or heavy cardboard 3"x4", Masking tape.

One person can apply the window graphics, However, it is helpful to have someone help you. Take your time and you will have a successful installation.

**1.** Hold product on the outside of your window with back liner still on. Position so you have the best look when trimmed out. Tape the top and bottom to the vehicle to hold it in place.

**2.** Separate the liner and film at the corners. Tape the liner to the vehicle to help hold it in place. Continue separating the film by pulling material to the opposite side to the tape. Tape the corner to hold it in place while you cut the liner.


**3.** Cut liner a few inches away from the print and remove.

**4.** Remove tape from corner. Hold the material away from the window at a 45 degree angle with one hand. Using a cloth or a soft squeegee, start from the center working the film down top to bottom a few inches at a time. Lightly press the film into place. If any bubbles appear, simply pull film back to bubble and reapply. Use light pressure until it is completely installed, then go over it with heavier pressure.

**5.** Remove the rest of tape and peel the remaining liner back 8" to start. Then apply as above, removing liner as you are applying the film to the window. Then work film into corners and edges.

**6.** Using a utility knife with light pressure, carefully trim away any unneeded portion of the graphics. Use caution not to cut rubber seals. Wipe the material one last time with firm pressure. Stand back and admire your new window graphic!

**NOTE:** When applying to a slider window, apply as above, spreading over the slider itself. Then press the film in the center of the slider window to hold it in place. Use a utility knife and trim on each side of the slider. Finish pressing the rest of film in place. Trim more if needed. On an SUV you may need to go around hinges or wipers. Apply film to main areas first, then trim material as you work it around these areas.

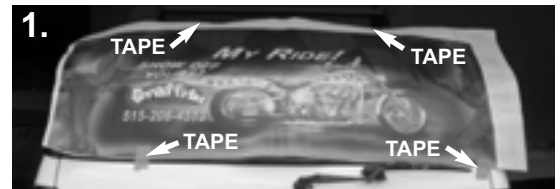

Safe with rear window defroster and car washes. Avoided applying heavy water pressure directly on print. Running wiper on product will cause image to wear off. Do NOT use Ice scrapper, this will cause damage to your print. Vision may be impaired when wet. Simply wipe dry with a towel or chammy. Clean with soap and water only. Do NOT use solvents. Solvents may remove the image.

Do not apply to driver or passenger windows or front windshield. Check with local laws before applying to any windows.